



CENTER THE KITCHEN WINDOW AT 54" FROM THE INSIDE OF THE RISER WALL AND 42" OFF THE FLOOR TO THE BOTTOM OFF THE WINDOW.

CENTER THE DINETTE WINDOW AT 31" FROM THE INSIDE OF THE RISER WALL AND 34" OFF THE FLOOR TO THE BOTTOM OF THE WINDOW.