



CENTER THE KITCHEN WINDOW AT 54" FROM THE INSIDE OF THE RISER WALL AND 42" OFF THE FLOOR TO THE BOTTOM OF THE WINDOW.

CENTER THE KITCHEN WINDOW AT 37" FROM THE INSIDE OF THE RISER WALL AND 34" OFF THE FLOOR TO THE BOTTOM OF THE WINDOW.