



CENTER THE DINETTE WINDOW AT 36" FROM THE INSIDE OF THE RISER WALL AND 34" OFF THE FLOOR TO THE BOTTOM OF THE WINDOW.

START THE CAMPER DOOR AT 62" FROM THE INSIDE OF THE RISER WALL.

CENTER THE KITCHEN WINDOW AT 19" FROM THE INSIDE OF THE RISER WALL AND 42" OFF THE FLOOR TO THE BOTTOM OF THE WINDOW.